
Vacuum Cleaner \$10 / \$10 plus

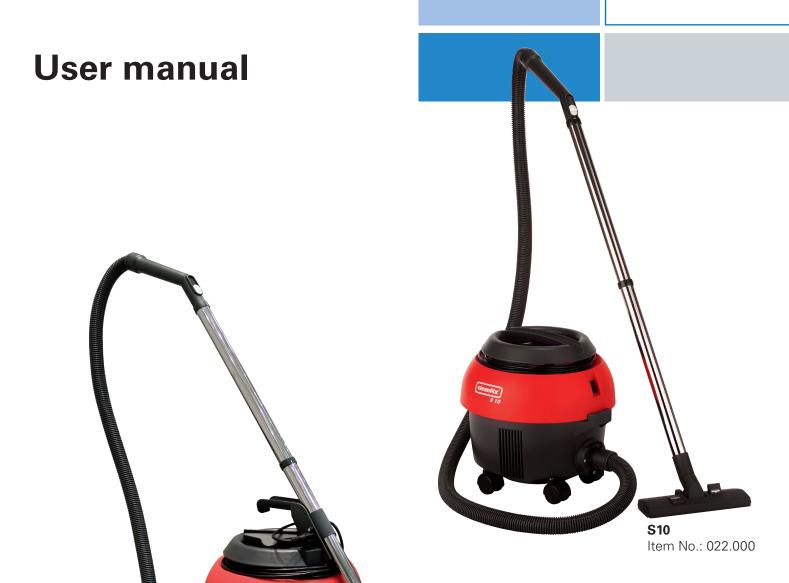



S10 plus / S10 plus Eco Item No.: 022.010 / 022.010E

Cleanfix Reinigungssysteme AG

Stettenstrasse 15 CH-9247 Henau-Uzwil/SG Tel. +41 71 955 47 47 info@cleanfix.com

S10 / S10 plus

User manual





Unwind power cableCheck the cable, replace it if damaged



Open vacuum cleaner Release the black flap and lift the upper part



Lift out filter basketReplace it if heavily soiled



Check dust bagIf it is full, replace it (see "Inserting the dust bag" below)



Insert filter basketFreely applicable, without predetermined position



Optional: HEPA-FilterReplace it if heavily soiled



Check motor filterReplace it if heavily soiled



Motor filterCorrectly inserted filter



Close vacuum cleaner 1 Step 1: Guide the upper part at a slight angle into the tab (a)



Close vacuum cleaner 2 Step 2: Press the flap (b) again



Switch on vacuum cleaner Connect the power cord to power and press the switch



Combi floor nozzleCarpet setting (a)
Hard floor setting (b)



Missing air supplyTo clean soft textiles, open the air vent



Clean combi floor nozzle
After use, remove the nozzle
and vacuum it



Switch off vacuum cleaner Press the switch and disconnect the power cord



Clean vacuum cleaner Wipe the entire vacuum cleaner with a slightly damp cloth



Winding up the cable Wind the cable tightly under the black ring



Insert suction rod Insert the slide clamp (a) at the handle (b) (model S10 plus)



Suction rod insertedOnly possible with the models S10 plus



Storing vacuum cleaner Optionally wrap the hose around the suction tube

Insert dust bag

We offer dust bags from:

- Textile - Fleece - Paper



Clean the dust bag connection in the vacuum cleaner if necessary



Insert the dust bag Observe the "Top Oben" mark on the dust bag



Plug in the dust bag tightly



Make sure that the dust bag is evenly positioned